

U-140 Replacement bushing...

This bushing is directional and must be installed as shown below. The gear is smaller inside on the welded end and the bushing is adjusted to compensate. Press bushing with support below the gear to avoid distorting the drum. Bushing should be flush on the bottom.

www.omegamachine.com Part # 32500

